

Life's Good LG

 
# Migo

Let's Get Started Guide



# Migo

## Phone Overview

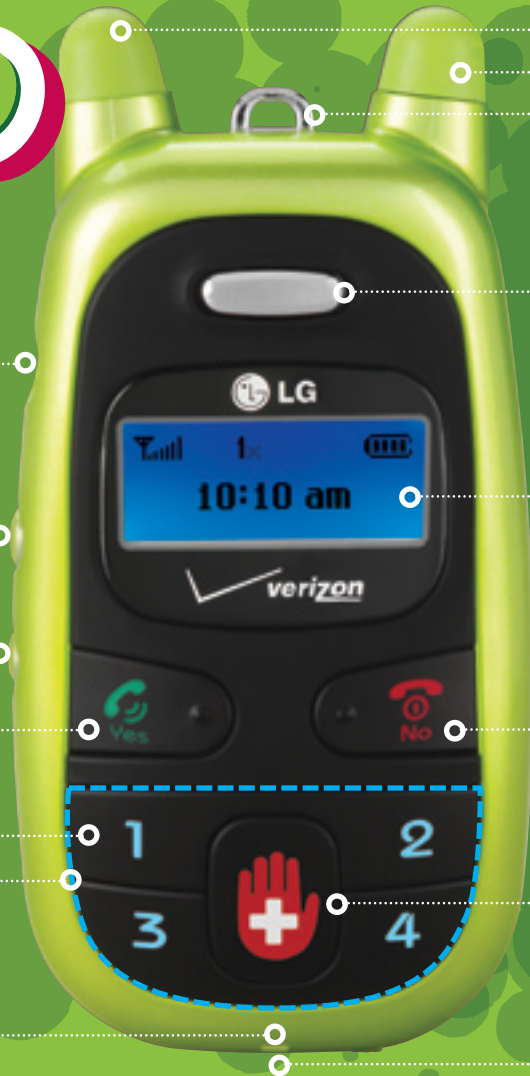

Antennas

Accessory Hook

Speaker

Earpiece

LCD Screen

Headset Jack

Volume Up/  
Down/Vibrate  
[Adjust the ringer  
volume, earpiece volume  
and activate vibrate]

Yes Key  
[Answer a call or  
access the Menu]

No/PWR/  
Date/Clear Key  
[In standby mode, press  
to display the date]


Speakerphone  
Number Keys  
[Add phonebook  
entries and make a  
call to a contact]

Emergency Key

Microphone


Charging Port

# Just for Kids

 


## Making a Call

 1. From standby mode, press one of the 4 preprogrammed **Number Keys**.
2. The recipient's name will be displayed. For example: **Call MOM?**
3. Press to make the call.




## Making an Emergency Call

 1. From standby mode, press and *hold* the **Emergency Key** .
2. A confirmation will be displayed: **Call 911?** or **Call Emergency?** (depending on what number is preprogrammed)
3. Press and *hold* to make the call.



## Using the Speakerphone

 1. From standby mode, press and *hold* .
2. "Speaker On" will be displayed.
3. To turn off the speakerphone, press and *hold* again. "Speaker Off" will be displayed.



## Turning On Vibrate Mode

1. From standby mode, press and *hold* either **Volume Key** until "Vib Only" is displayed.
2. To set phone to vibrate and ring, press the **Volume Up Key** until "Ring + Vib" is displayed.



## Missed Calls

When a call is missed, the caller's name or number will be displayed.  
For example: **Missed Call MOM**

# Parents' Section

1 Set Ringtone  
2 Set Caller ID

⊙ Ringtone 1  
○ Ringtone




Call 1:   
Enter Menu?

Set Location:  
1,2,3 or 4





3 Phonebook  
4 Emergency #

Lock Code  
????

## Setting the Ringtone



 
1. From standby mode, press . **Enter Menu?** is displayed.
2. Press  again.
3. Press **1** for **Set Ringtone**.
4. Use the **Side Keys** to highlight one of 10 available ringtones and press  to select.

## Setting Caller ID

1. From standby mode, press . **Enter Menu?** is displayed.
2. Press  again.
3. Press  for **Set Caller ID**.
4. **Set Location: 1, 2, 3 or 4** is displayed. Select one of the locations to assign a caller ID ringtone.
5. Use the **Side Keys** to highlight one of 10 available ringtones and press  to select.

## Entering the Emergency Number

This allows you to set the **Emergency Key**  to a desired number.

1. From standby mode, press . **Enter Menu?** is displayed.
2. Press  again.
3. Press **4** for **Emergency #**.
4. **Lock Code ?????** is displayed. Enter the numbers **2 4 3 1** in that order.
5. Using the keypad, enter an emergency number and press  when finished.

**Note:** The Emergency Key is preset to dial 911.

**Set Location:  
1,2,3 or 4**

**Enter Number  
8585556214**

**Enter Name  
DADDY**

## Phonebook Entry: multi-tap method

Enter Phone Number  
**1,2,3**

Enter Name  
**A,B,C,D,E,F**

Enter Phone Number  
**7,8,9**

Enter Name  
**M,N,O,P,Q,R,S**

### Adding a Number to the Phonebook

The phonebook stores up to 4 numbers. To enter numbers and names, use the multi-tap method displayed in the chart below.

1. From standby mode, press **2**. **Enter Menu?** is displayed.
2. Press **2** again.
3. Press **3** for **Phonebook**.
4. **Lock Code ?????** is displayed. Enter the numbers **2 4 3 1** in that order.
5. **Set Location: 1, 2, 3 or 4** is displayed. Select one of the locations.
6. Using the keypad, enter a phone number and press **2** when finished.
7. Using the keypad, enter a name for the entry and press **2** when finished.



### Multi-tap method:

Repeatedly press one of the 4 Number Keys to display the desired number or letter.

Enter Phone Number  
**4,5,6**

Enter Name  
**G,H,I,J,K,L**

Enter Phone Number  
**0,\*,#**

Enter Name  
**T,U,V,W,X,Y,Z**

# Migo



**Kid-Friendly  
Compact Design**



**Super Simplified  
Keypad and  
Interface**



**Booming  
Speakerphone**



**Dedicated  
Emergency Key**



**4 Parent  
Programmable  
Numbers**



LG Electronics MobileComm U.S.A., Inc. | 10225 Willow Creek Road, San Diego, CA 92131-1639  
Customer Service: 800-793-8896 | [www.LGUSA.com](http://www.LGUSA.com)

## LEGAL STUFF

All materials in this training manual including, without limitation, the design, the text, and any marks are the property of LG Electronics, Inc. ALL RIGHTS RESERVED Copyright © 2005 LG Electronics, Inc. All product and service marks contained herein that are not LG Electronics, Inc. proprietary marks are the trademarks of their respective owners. LG Electronics, Inc. makes no claim to such properties. Phone features and specifications are subject to change without prior notice. The use of non-LG or non-Verizon Wireless approved accessories will void the warranty and may result in damage to the phone, the phone exploding, or other dangerous conditions. MICOTM/VERIZON